


⚠ Safety notes

This product should be installed in line with installation rules, preferably by a qualified electrician. Incorrect installation and use can lead to risk of electric shock or fire. Before carrying out the installation read the instructions and take account of the product's specific mounting location. Do not open up, dismantle, alter or modify the device except where specifically required to do so by the instructions. All Legrand products must be opened and repaired exclusively by personnel trained and approved by Legrand. Any unauthorised opening or repair completely cancels all liabilities and the rights to replacement and guarantees. Use only Legrand brand accessories.

The device contains a LiMnO₂ primary cell. When the product reaches the end of its life, this cell must be correctly removed and disposed of in accordance with national legislation and the requirements of environmental protection.

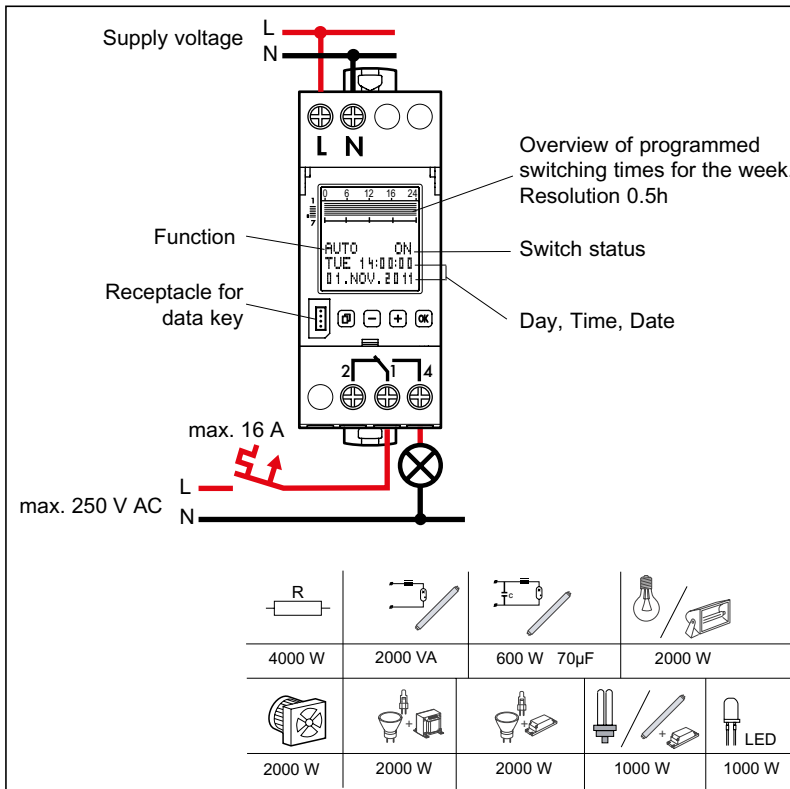


Operating principle: Typ 1.B. S. T.
 IEC/EN 60730-1, IEC/EN 60730-2-7
 Operation in a normal environment
 Montage: in distribution panel, Degree of contamination: 2
 Switch output, potential-free
 Rated impulse voltage: 4 kV

General information

- Start-up: after applying the supply voltage, the time switch starts automatically with the last selected function. The relay position is set by the current program.
- Battery backup
 - Backlighting not active
 - Data key READ/WRITE only via the menu


- Select menu, back to main menu, Hold down > 1s = operating display
- Confirm selection or load parameters
- Select menu options or set parameters

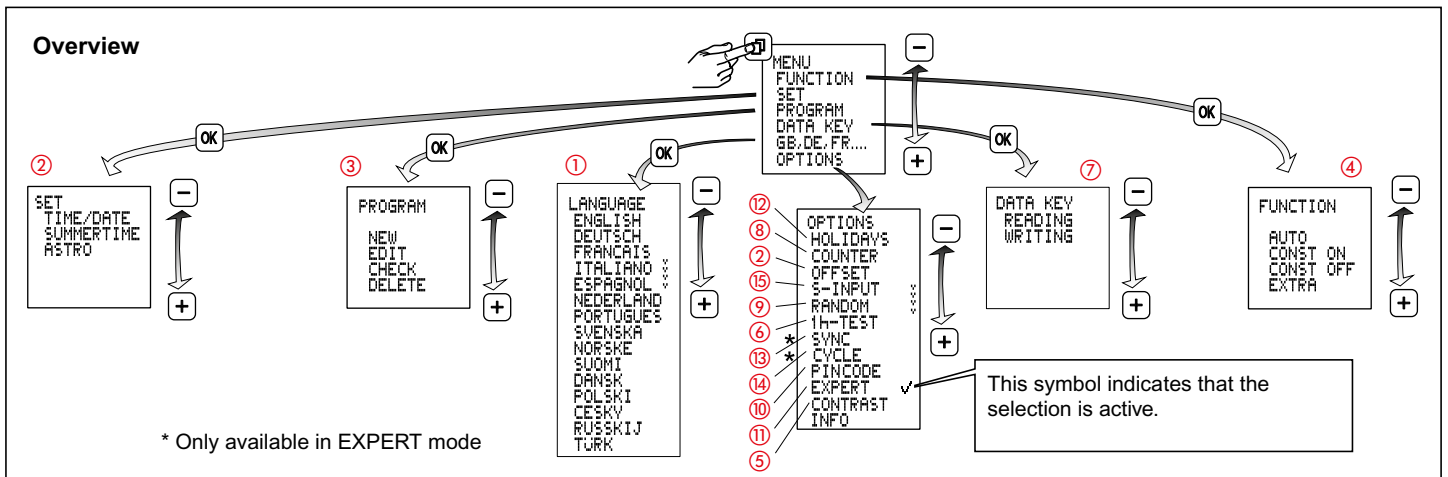

Technical data	4 126 54	4 126 55	4 126 56
	047 64	047 65	047 66
Supply voltage:	230V 50/60Hz	120V 50/60Hz	24V 50/60Hz
Power consumption:	1 W		
Relay outputs:	1 changeover contact 16A 250V~µ cos φ = 1		
Accuracy:	~ 0,1 s/day		
Wire cross-sections:	single-strand 1,5...4 mm ²	multi-strand 1,5...2,5 mm ²	
Programs	56 programs		


Control-cable length:	max. 50 m
Control signal:	230V AC/ 2mA, 120V AC/ 2mA, 24V AC/ 2mA
Control-pulse duration:	100...200ms
Delaytime:	0 ... 23 h 59 min 59 s
Local coordinates:	Resolution 1°/ 1' in EXPERT-Mode
Battery reserve:	5 years
Storage temperature:	- 20°C to +60°C
Operating temperature:	-20°C to +55°C

1 Set language

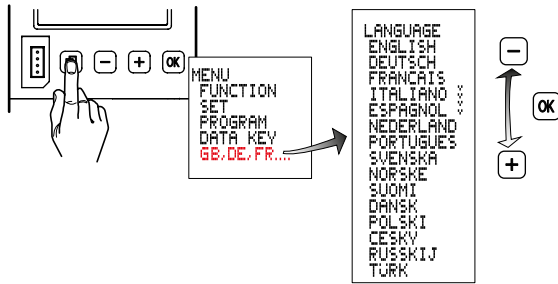


2 Set


A Set time/date

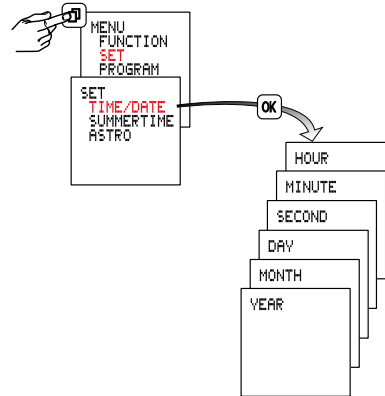



B Summertime

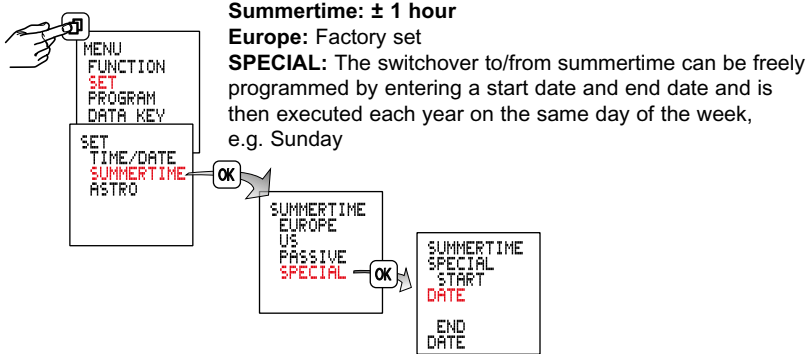

C Astro

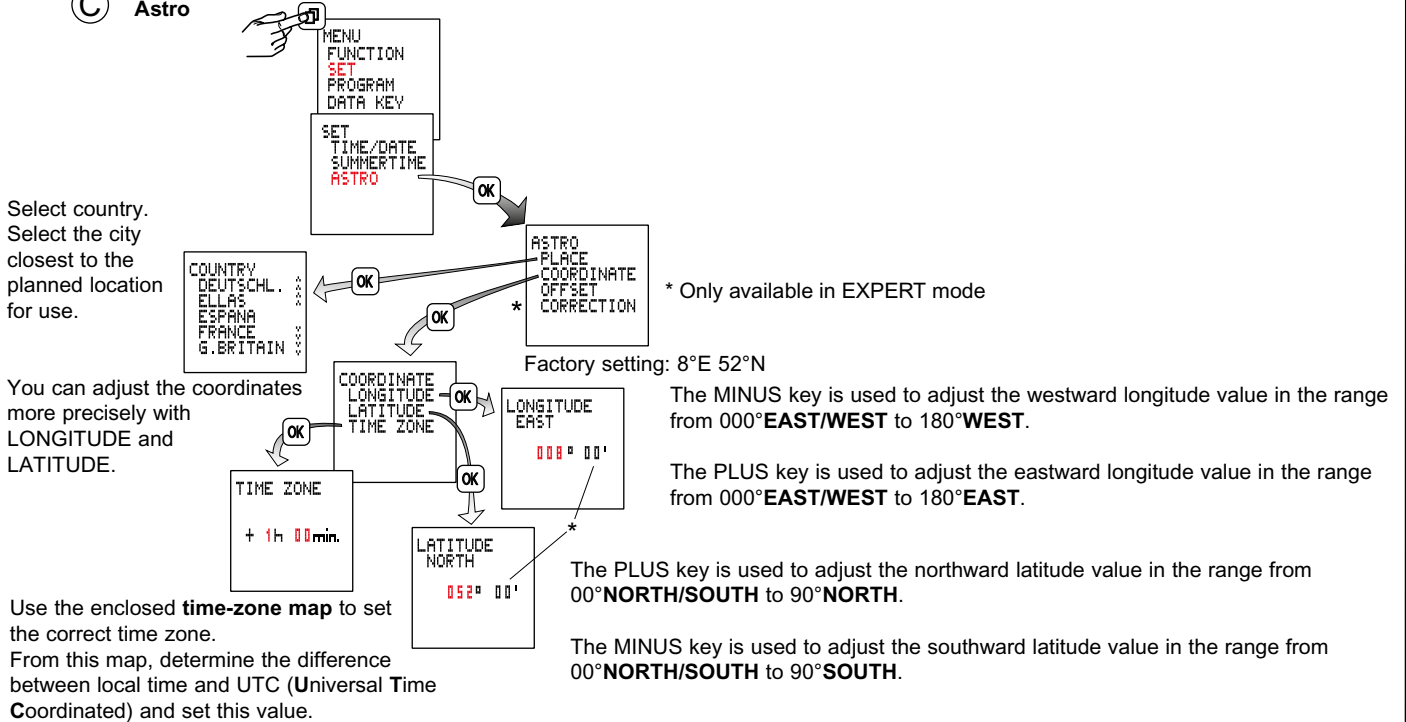



D Offset

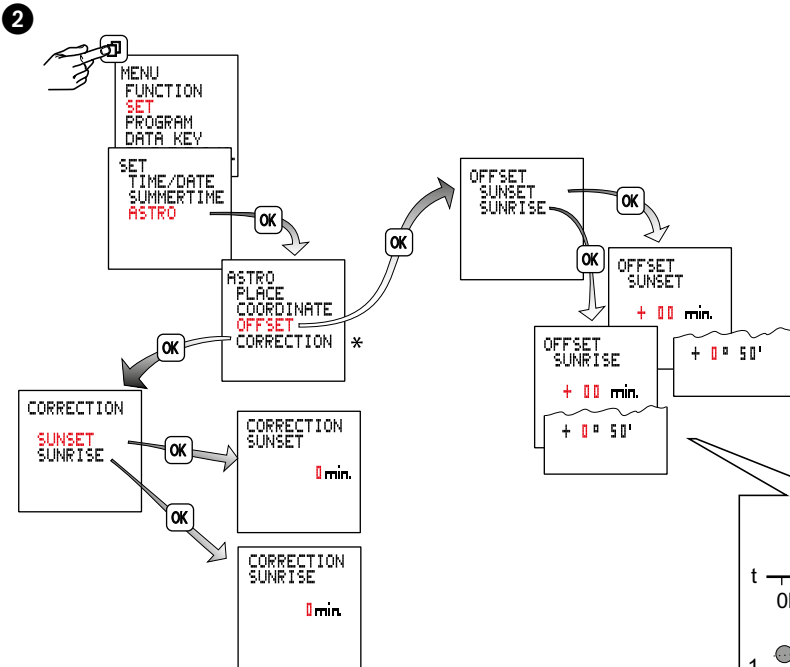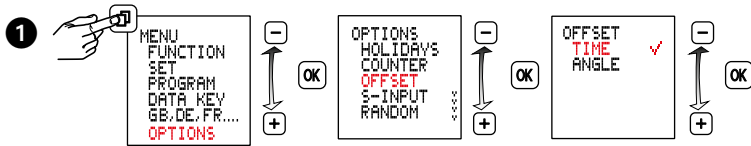

* This function is available in Expert mode.

Setting the correction value (1...30 min.) extends the daily ON period in the middle of the winter season by up to 60 minutes (OFF up to 30 min. later in the morning, ON up to 30 min. earlier in the evening).


In the middle of the summer season, the correction setting reduces the daily ON period by up to 60 minutes (OFF up to 30 min. earlier in the morning, ON up to 30 min. later in the evening).

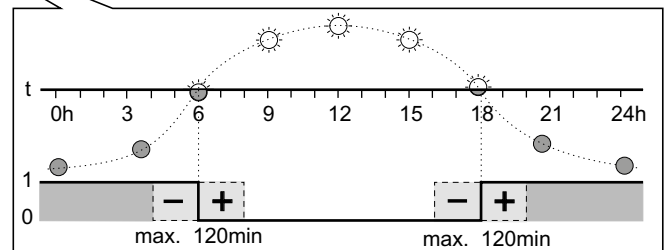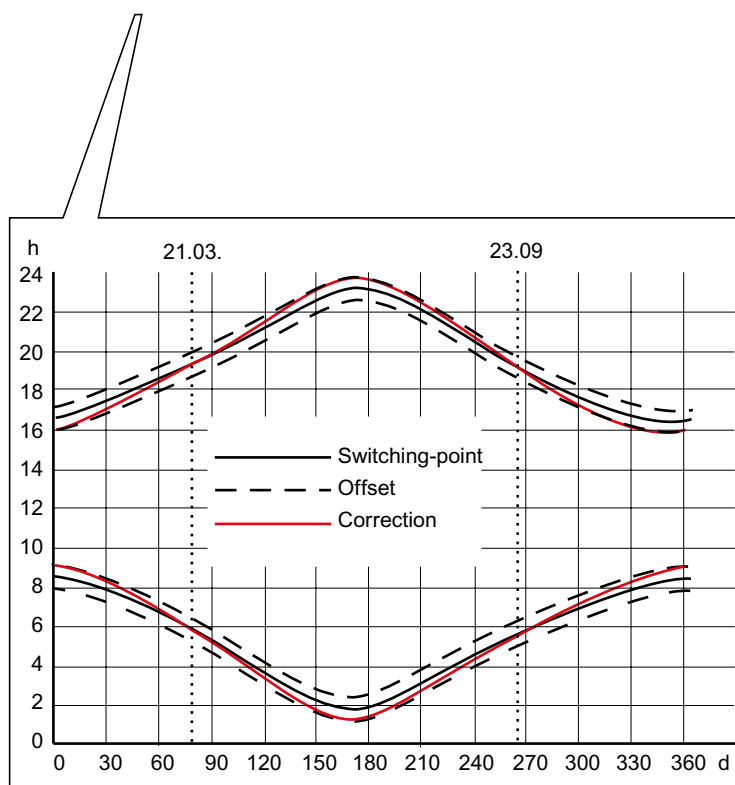

The time switch switches on at the calculated sunset time and off at the calculated sunrise time.

By setting an offset, you can shift the switching times by up to ± 120 minutes with respect to the calculated sunrise and sunset times.

Example: If you set the offset to +30 minutes, the time switch will switch 30 minutes after sunrise and 30 minutes after sunset. If you set the offset to -30 minutes, the time switch will switch 30 minutes before sunrise and 30 minutes before sunset.

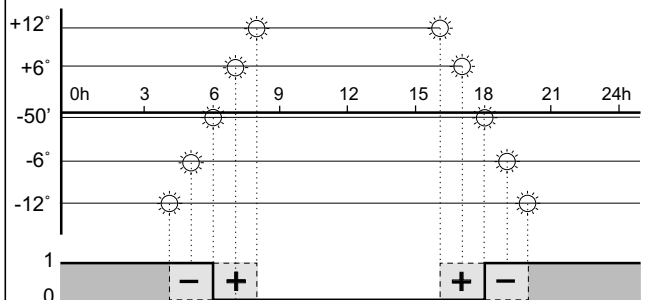


If the offset setting is in degrees the time switch switches on and off at times of equal brightness, despite the differences in twilight time lengths over the course of the year.

Sunrise and sunset correspond to $-50'$ for the centre of the sun (the edge of the sun is visible on the horizon).

3

Programming


A program consists of an ON time, an OFF time and the associated ON and OFF days.
 If you select „MON TO SUN“ (Monday to Sunday), the days are already assigned and you only need to set the ON and OFF times.
 If you select „INDIVIDUAL“, you can assign the ON and OFF times to any desired days.
 The programs are linked to one another by logical OR.

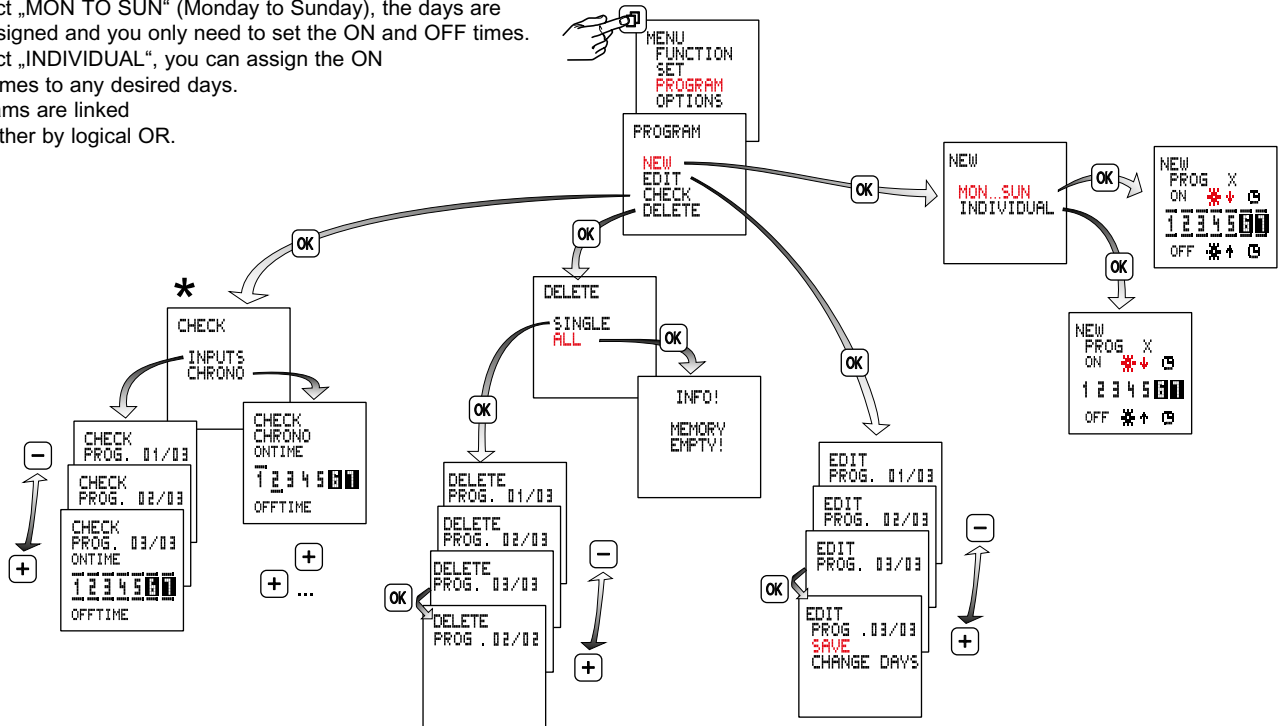

*
 CHRONO = the switching times are indicated in chronological order during the week.
 INPUTS = programs are indicated in the order in which they are entered.


Programming examples

① The timer is to switch on at sunset on each day of the week and switch off at sunrise.

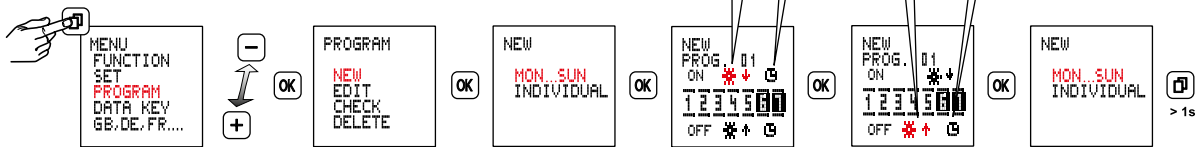

② The timer is to switch on at sunset on each day of the week and switch off at sunrise. In addition, it is to be switched off each night between 23:00h and 5:00h. This requires the use of two programs.

Program 1: ON at sunset and OFF at 23:00h
 Program 2: ON at 5:00h and OFF at sunrise.

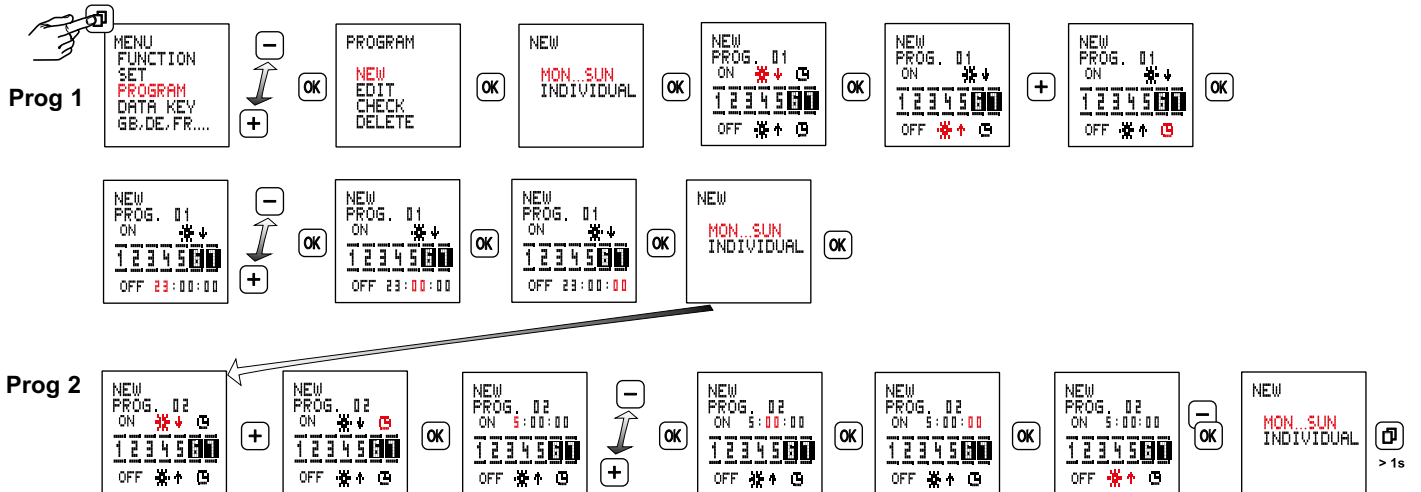


4 Modes

- **Auto** - Automatic operation
- **Constant ON**
- **Constant OFF**

Note: The output is switched ON if a control input signal is present.

- **Extra**
The switch status imposed by the program is inverted (manual override). With the next effective switch command, the time switch resumes control of ON/OFF switching.

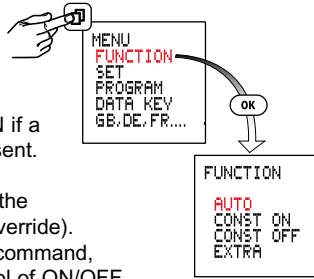


Reset

Warning!


The memory will be cleared, and all set data will be lost.

Hold down **OK** for more than 3 seconds and at the same time press and release **OK**, **-**, **+**.

The language, time, date, summertime/wintertime and switching times will have to be reentered.

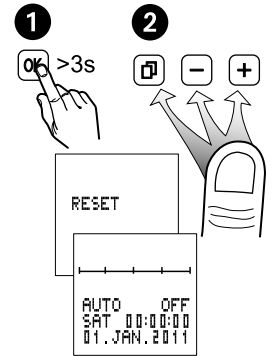


5 Contrast adjustment

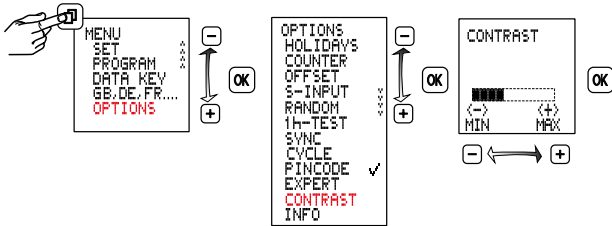


6 1 h-Test

When this function is activated, the output is switched ON for one hour.

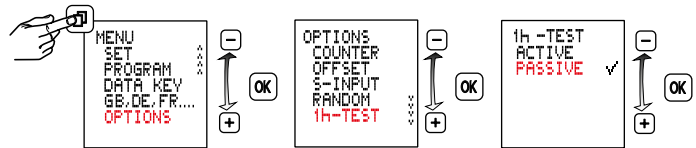


After one hour, the time switch returns automatically to the programmed mode.

7 Data key

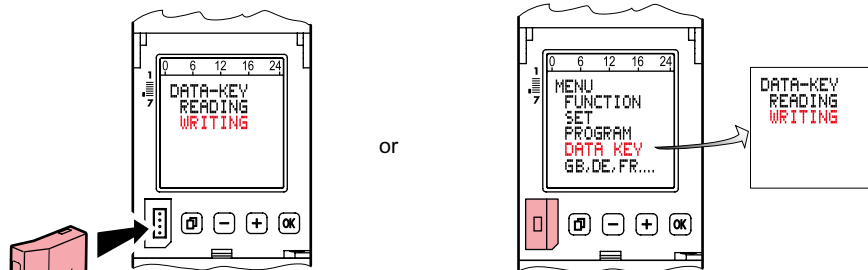

Load the programs of the time switch on to a data key (WRITE KEY)

Warning! all programs stored on the data key will be overwritten.

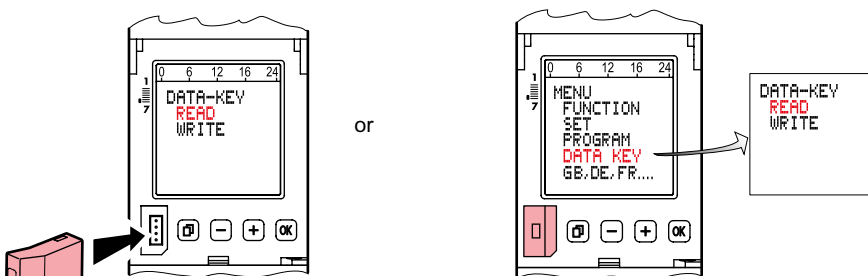


Load the programs from the data key to the time switch (READ KEY)

Warning! all programs stored in the time switch will be overwritten.

8 Hour counter


Displays the total relay ON time (0 to 65535 h) and the date of the last reset.

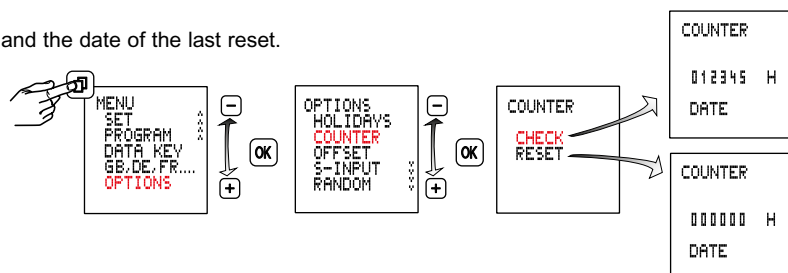

9 Random function

Function to simulate presence.


Function active: the programmed switching cycles are shifted at random within the range of ± 15 minutes.

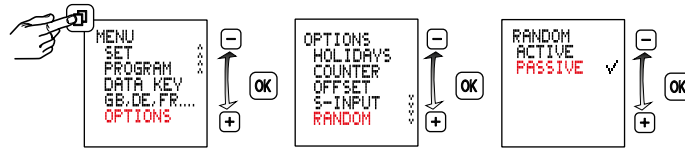

10 Pincode

PIN CODE active: The menus of the time switch will not be accessible unless the PIN CODE has been entered. When the pin code is active, access to the button and key functions is disabled 1 minute after the last button press.


PIN free access can be re-enabled by selecting PASSIVE or by resetting the device.

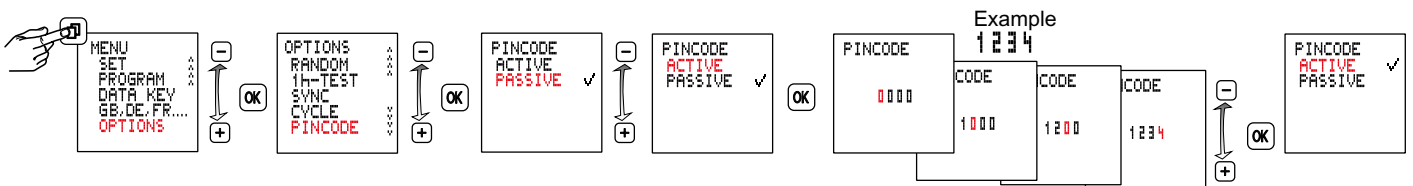

11 Expert mode

Some additional functions are available in Expert mode:

- Power grid synchronisation to improve the accuracy
- Cycle function
- Summer / winter seasonal correction
- Control input Extra and Off

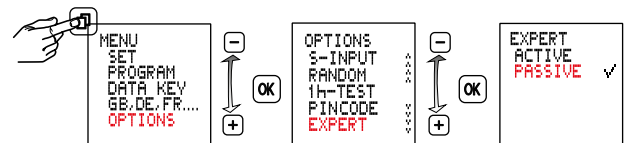


Note: Upon switching from ACTIVE to PASSIVE the additional menu items are hidden again and all the Expert mode settings are cancelled. After re-activating, Expert mode will operate again with the basic settings.

12 Holidays

After activation the holiday program is executed between 0:00h on the start date and 24:00h on the end date (Constant ON/OFF).


After the holiday program has run once, it must be reactivated.

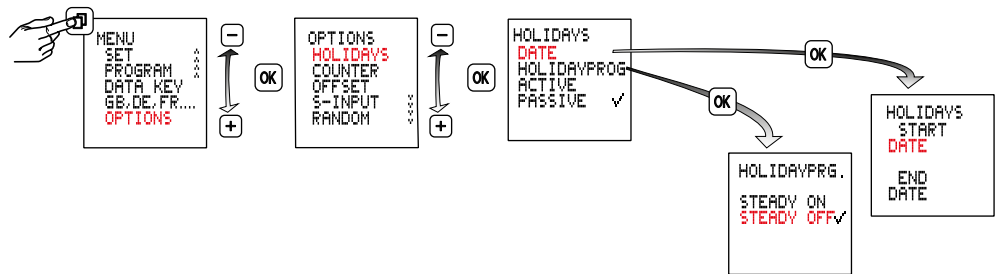

13 Activating and deactivating grid synchronisation

Only available in EXPERT mode.

The default setting is PASSIVE. In order to improve the long-term accuracy, it is advisable to activate synchronisation if the time switch is supplied from a on 50/60 Hz grid with frequency adjustment.


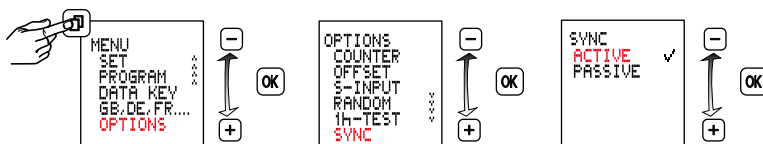


14 Cycle function

Only available in EXPERT mode



For cyclical switch commands the switching on time is set by logical "OR" of programs of all types. A fixed cycle of ON and OFF time then operates within those limits. The cycle always starts with the ON time.

The cycle duration and the ON time within the cycle have the same length for all switching times. The cycle duration and the ON time can be set independently in one-second increments. If the switching time is shorter than the cycle duration, the cycle will be shortened accordingly. The ON time will remain unchanged. If the switching time is actually shorter than the ON time, the ON time will be shortened accordingly.

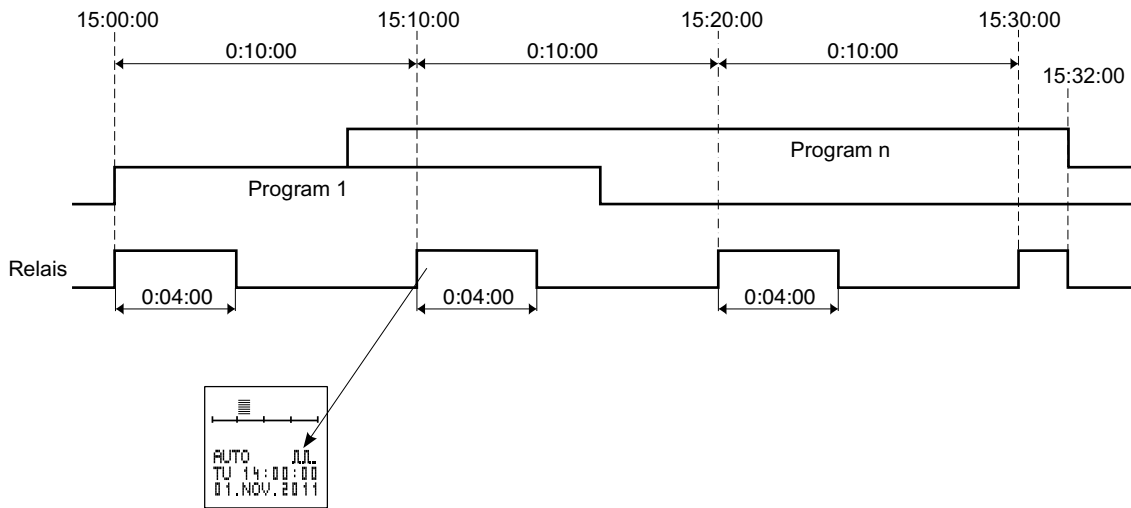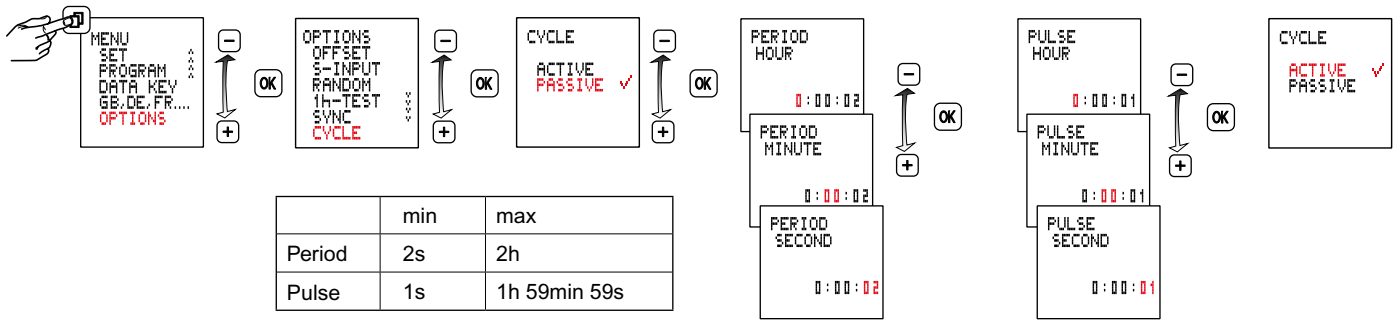

15 Control input with delay time

A control signal is superimposed on all program commands. While this control signal is applied, the output is switched ON. When the control signal is switched off, the output is switched OFF after a delay time, unless an ON command is applied by a program.

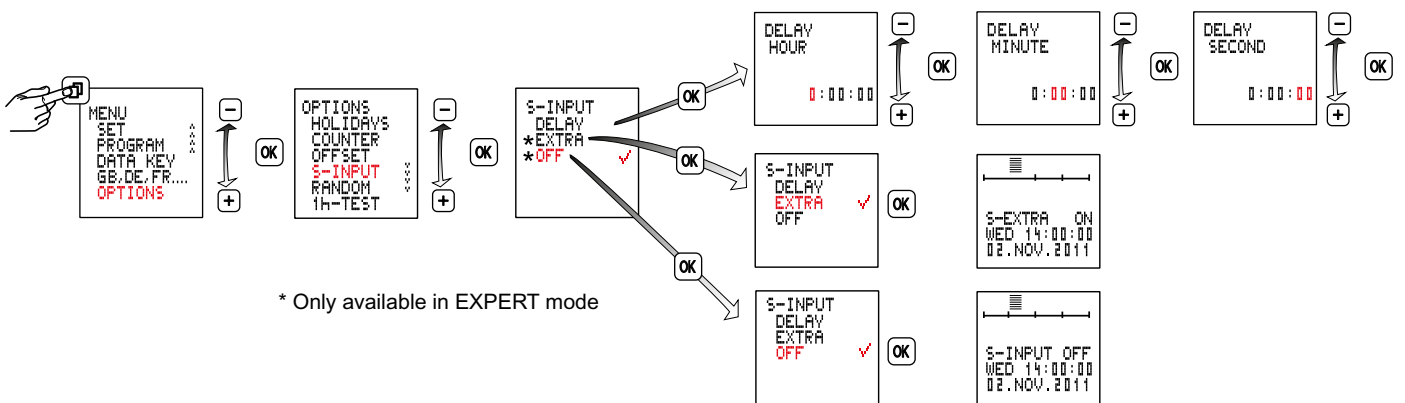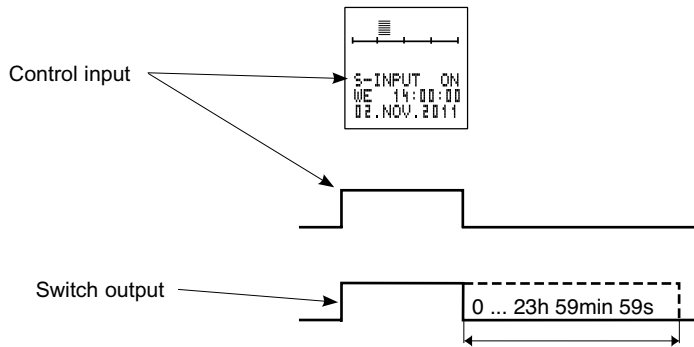

DELAY

The output switches on when the control input is activated and remains switched on for the duration of the set delay time after the control input has been deactivated. Delay time setting range 0h 00min 00s ... 23h 59min 59s. The control input can be subsequently triggered within the delay time.


EXTRA

The control input signal inverts the switching state specified by the program. At the next valid switching command the time switch resumes switching ON and OFF.


OFF

The control input signal sets the switching state to OFF if the program specifies ON.

Warning: Electrical shock - Disconnect all power from the device before dismantling the module and replacing the battery. Always use a Li cell type battery (LiMnO₂) CR2477, 3V high temperature type min +85 °C

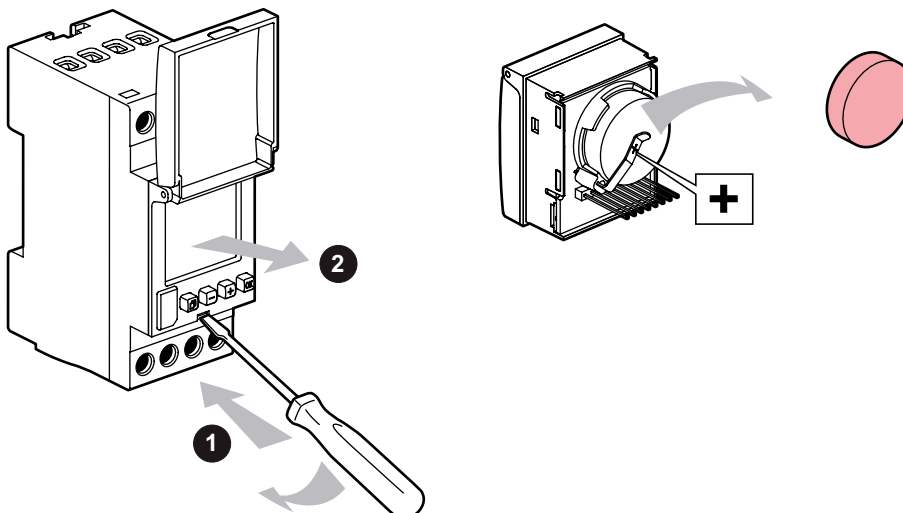

- Zeitonenkarte
- Carta dei fusi allegata
- Tidssonenkortet
- Ajavõõndite kaart
- Mapa ss časovými pásmami
- Zaman dilimleri kartı
- Carte des fuseaux horaires
- Carta de husos horarios
- Tidszons kartan
- Laika zonu karte
- Map of time zones
- Map of time zones
- Time-of-day oversight
- Carta de fusos horarios
- Laiko juostų žemėlapis
- Map of time zones
- Tidszone kaart
- Αικαγόηυκεκάρταα
- ηώτα υώιαΩυμ ατώήξτυμ
- Mapa stref czasowych
- Időzóna térkép

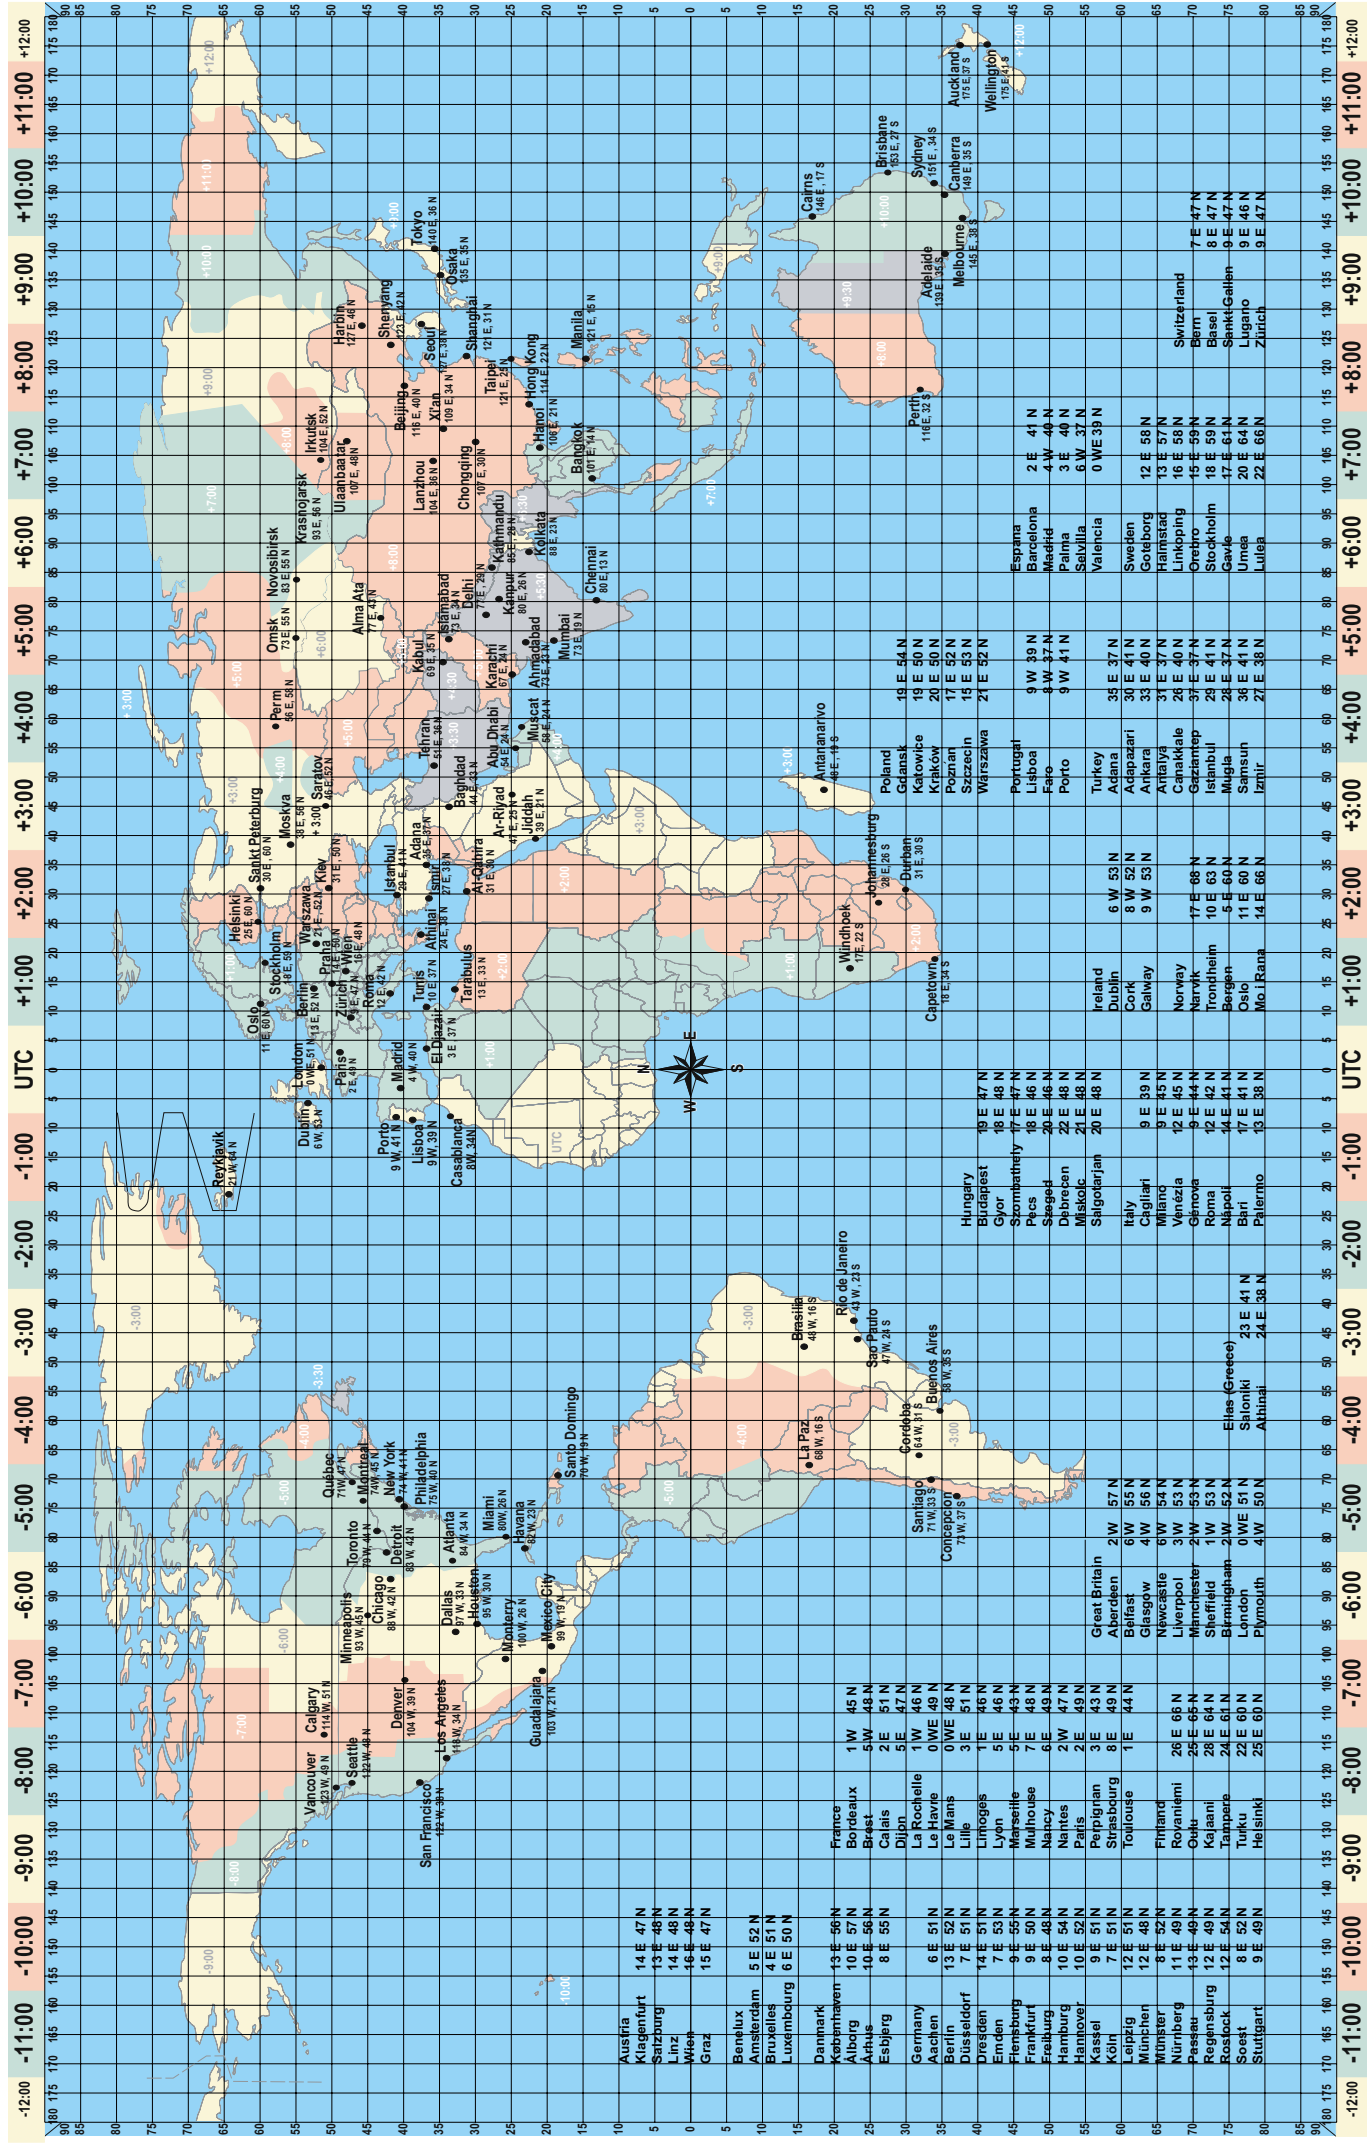

- Austria 14 E 47 N
- Klagenturt 13 E 48 N
- Salzburg 14 E 48 N
- Linz 14 E 48 N
- Wien 16 E 48 N
- Graz 15 E 47 N
- Benelux 5 E 52 N
- Amsterdam 4 E 51 N
- Bruxelles 4 E 51 N
- Luxembourg 6 E 50 N
- Denmark 13 E 56 N
- København 10 E 57 N
- Alborg 10 E 56 N
- Århus 10 E 56 N
- Esbjerg 8 E 55 N
- Germany 6 E 51 N
- Aachen 13 E 52 N
- Berlin 10 E 51 N
- Düsseldorf 14 E 51 N
- Limoges 14 E 51 N
- Lyon 5 E 46 N
- Metz 7 E 49 N
- Marseille 9 E 50 N
- Frankfurt 9 E 50 N
- Freiburg 6 E 49 N
- Nancy 6 E 49 N
- Nantes 2 E 47 N
- Paris 2 E 49 N
- Perpignan 3 E 43 N
- Strasbourg 8 E 49 N
- Toulouse 1 E 44 N
- Great Britain 6 E 51 N
- Aberdeen 2 W 57 N
- Belfast 6 W 55 N
- Glasgow 4 W 56 N
- Newcastle 1 W 54 N
- Liverpool 3 W 53 N
- Manchester 2 W 53 N
- Oxford 1 E 52 N
- Cardiff 3 W 53 N
- Sheffield 1 W 53 N
- Birmingham 1 W 52 N
- London 0 W 51 N
- Shionliki 23 E 41 N
- Athens (Greece) 24 E 38 N
- Ahnaha 13 E 38 N
- France 1 W 45 N
- Bordeaux 5 W 48 N
- Brast 2 E 51 N
- Calais 2 E 51 N
- Dijon 5 E 47 N
- La Rochelle 1 W 46 N
- Le Havre 0 W 49 N
- Le Mans 10 E 48 N
- Lille 3 E 51 N
- Lyon 5 E 46 N
- Metz 7 E 49 N
- Marseille 9 E 50 N
- Mulhouse 6 E 49 N
- Nancy 6 E 49 N
- Nantes 2 E 47 N
- Paris 2 E 49 N
- Perpignan 3 E 43 N
- Strasbourg 8 E 49 N
- Toulouse 1 E 44 N
- Finland 26 E 65 N
- Rovaniemi 25 E 65 N
- Oulu 28 E 64 N
- Kalajoki 24 E 61 N
- Tampere 22 E 60 N
- Tuusula 25 E 60 N
- Helsinki 25 E 60 N
- Hungary 19 E 47 N
- Budapest 18 E 48 N
- Győr 17 E 47 N
- Szeged 18 E 46 N
- Pécs 20 E 46 N
- Staged 22 E 48 N
- Debrecen 24 E 48 N
- Miskolc 24 E 48 N
- Salgotarjan 20 E 48 N
- Italy 9 E 39 N
- Cagliari 12 E 45 N
- Venezia 12 E 45 N
- Genova 9 E 44 N
- Roma 12 E 42 N
- Napoli 14 E 41 N
- Bari 17 E 41 N
- Palermo 13 E 38 N
- Ireland 6 W 53 N
- Dublin 8 W 53 N
- Cork 9 W 52 N
- Galway 8 W 52 N
- Norway 17 E 68 N
- Trondheim 10 E 63 N
- Bergen 5 E 60 N
- Oslo 11 E 60 N
- Mo. I Rana 14 E 66 N
- Turkey 35 E 37 N
- Adana 30 E 40 N
- Adapazarı 33 E 41 N
- Ankara 31 E 40 N
- Antalya 28 E 37 N
- Canakkale 28 E 41 N
- Gaziantep 37 E 37 N
- Istanbul 28 E 41 N
- Mugla 28 E 37 N
- Samsun 38 E 41 N
- Izmir 27 E 38 N
- Poland 19 E 54 N
- Gdansk 19 E 50 N
- Katowice 20 E 50 N
- Poznan 17 E 52 N
- Szczecin 15 E 53 N
- Warszawa 21 E 52 N
- Portugal 9 W 39 N
- Lisboa 9 W 37 N
- Faro 9 W 37 N
- Porto 9 W 41 N
- Spain 2 E 41 N
- Barcelona 4 W 40 N
- Madrid 3 E 40 N
- Seville 6 W 37 N
- Valencia 0 W 39 N
- Sweden 12 E 58 N
- Göteborg 13 E 57 N
- Linköping 16 E 58 N
- Örebro 18 E 59 N
- Stockholm 18 E 59 N
- Gävle 17 E 61 N
- Umeå 20 E 64 N
- Luleå 22 E 66 N
- Switzerland 7 E 47 N
- Bern 8 E 47 N
- Basel 9 E 47 N
- Sankt Gallen 9 E 47 N
- Lugano 9 E 47 N
- Zürich 9 E 47 N
- Australia 151 E 34 S
- Perth 116 E 32 S
- Adelaide 138 E 35 S
- Melbourne 146 E 36 S
- Canberra 149 E 35 S
- Auckland 175 E 35 S
- Wellington 175 E 41 S
- New Zealand 175 E 41 S
- Wellington 175 E 41 S