

## connectivity selection tables - copper solutions

configure your system

			Cat. 8	Cat. 6A	Cat. 6
	1U patch panels equipped with 24 connectors	STP	0337 82 <sup>(1)</sup> (see p. 15)	0337 72 <sup>(1)</sup> (see p. 18)	0337 62 <sup>(1)</sup> (see p. 22)
		UTP	-	0337 70 <sup>(1)</sup> (see p. 18)	0337 60 <sup>(1)</sup> (see p. 22)
		FTP	-	-	0337 61 <sup>(1)</sup> (see p. 22)
	1U patch panel to be equipped	With cassette <sup>(2)</sup>	0337 90(1) (see p. 15)	0337 90 <sup>(1)</sup> (see p. 18)	0337 90 <sup>(1)</sup> (see p. 22)
		Without cassette	0337 91( <sup>0</sup> ) (see p. 15)	0337 91 <sup>(1)</sup> (see p. 18)	0337 91 <sup>(1)</sup> (see p. 22)
	High density 1U patch panel to be equipped with 48 ports		-	0337 93 <sup>(1)</sup> (see p. 18)	0337 93 <sup>(1)</sup> (see p. 22)
	1U angled patch panel to be equipped with connectors		0337 92 <sup>(1)</sup> (see p. 16)	0337 92 <sup>(1)</sup> (see p. 19)	0337 92 <sup>(1)</sup> (see p. 23)
	1U high density angled patch panel to be equipped			0337 94 <sup>(1)</sup> (see p. 19)	0337 94 <sup>(1)</sup> (see p. 23)