 


Specific systems protection

ESP SSI Series



Combined Category C, B tested data link protector and Combined Type 2 and Type 3 tested mains protector (to BS EN 61643) suitable for Solid State Interlocking (SSI) mains power and data links. Protectors are Network Rail approved. For use on lines running within buildings at boundaries up to LPZ 1 through to LPZ 3 to protect sensitive electronic equipment.

Features & benefits

- Accepted for use on Network Rail infrastructure. NRS PADS references: ESP SSI/M - 086/047066; ESP SSI/B - 086/047067; ESP SSI/120AC - 086/047058 and ESP SSI/140AC - 086/047059 (Network Rail Approval PA05/00471)
- Very low let-through voltage (enhanced protection to IEC/BS EN 62305) between all sets of conductors - Full Mode protection (ESP SSI/120AC and ESP SSI/140AC) and all signal lines (ESP SSI/M)
- ESP SSI/B (or ESP SSI/B/G) modified base can be permanently wired into the system
- ESP SSI/M plug-in protection module can be replaced without interfering with the operation of the system
- ESP SSI/B (or ESP SSI/B/G) incorporates a 100 Ω terminating resistance that can be connected if required
- ESP SSI/B (or ESP SSI/B/G) can be flat mounted, or a built-in DIN rail foot allows simple clip-on mounting to top-hat (ESP SSI/B) or G DIN rails (ESP SSI/B/G)
- ESP SSI/120AC and ESP SSI/140AC are a compact size for easy installation in trackside cabinets and control rooms
- ESP SSI/120AC and ESP SSI/140AC have three way visual indication of protector status and advanced pre-failure warning

Application

To prevent transient overvoltage damage to Solid State Interlocking (SSI) systems, protectors should be fitted in trackside cabinets and equipment rooms, on both the data link and the mains power lines.

- For single phase mains power supplies of 90-150 Volts, use the ESP SSI/120AC (formerly ESP 120X)
- For single phase mains power supplies of 90-165 Volts, use the ESP SSI/140AC (formerly S065)
- For SSI data links, use the ESP SSI/B (or ESP SSI/B/G) base unit with the ESP SSI/M protection module

Installation


ESP SSI/B: Connect in series with the data link either near where it enters the trackside location cabinet or the equipment room.

ESP SSI/120AC and ESP SSI/140AC: Install in parallel, within the trackside cabinet or equipment room. The protector should be installed on the load side of the fuses, at the secondary side of the step-down transformer. Connect, with very short leads, to phase (BX), neutral (NX or CNX) and earth.

Full product range order codes can be found on pages 17/8-17/9

Use ESP PTE002 SSI tester for line-side testing of SSI/M modules.

14

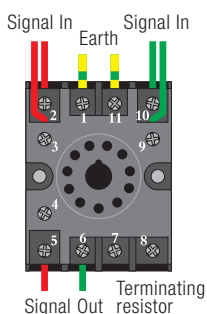

- 1 - Earth in Line
- 2 - Primary signal in + Line
- 3 - Secondary signal in + Line
- 4 - Not connected
- 5 - Signal out + (to DLM) Clean
- 6 - Signal out - (to DLM) Clean
- 7 - Not connected
- 8 - 100 Ω terminating Clean resistor
- 9 - Primary signal in - Line
- 10 - Secondary signal in - Line
- 11 - Earth in Line

Parallel connection of single phase protectors ESP SSI/120AC and ESP SSI/140AC (fuses not shown for clarity)

