

TRIDONIC

Triac Driver Installation Guide

LCA 44W 700-1050mA flexC PH-C SR ADV

NET-60-43-80 / NET-60-43-82



Distributed by




Installation procedure: Carefully read the instructions and ensure the mains supply is isolated before installation. Please follow the wiring information before carrying out any installation. When installing, leave a space of at least 1.2m between the LED Panel and any heating source / air conditioning unit. Please retain this leaflet for future reference.

Wiring type and cross section:

The wiring can be in stranded wires with ferrules or solid. For perfect function of the cage clamp terminals the strip length should be 4 - 5 mm for the input terminal. The max. torque at the clamp screw (M3) is 0.2 Nm.

Input / Output terminal:

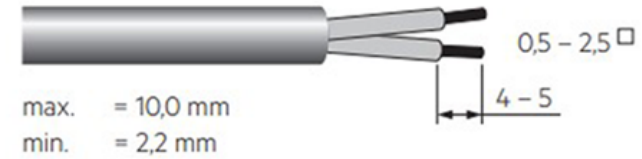

Certificate No. FS 571788



Certificate No. EMS 571787

NET LED Ltd.
Buckingway Business Park
300 Anderson Road
Cambridge
CB24 4UQ
sales@netled.co.uk
www.netled.co.uk


Technical Helpline: 01223 851505
Email: support@netled.co.uk

www.netled.co.uk/downloads


Wiring Diagram

Remove existing Driver and wire as below diagram.

600 x 600mm Panels (Default)

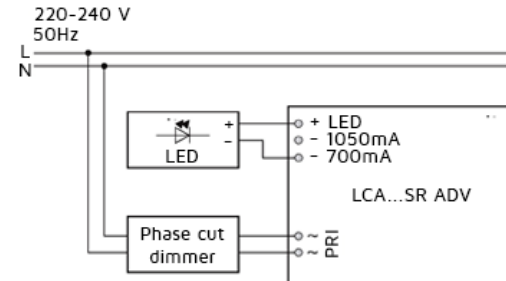

1200 x 600mm Panels (Upgraded output)

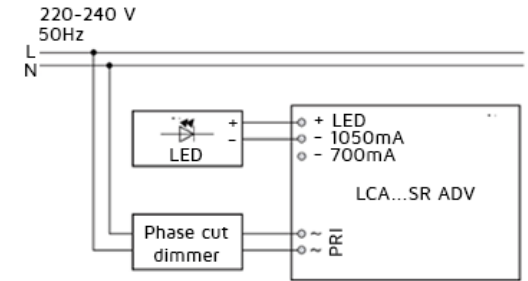

Dimension Drawing

