

Mains power protection

ESP M2/M4 Series



LPZ
0 → 3

FULL MODE
Bonding + Equipment Protection

MAINS TEST TYPE
1 + 2 + 3

ENHANCED
Low let-through voltage

ACTIVE VOLT-FREE CONTACT

3-WAY + N-E FAULT STATUS INDICATION

Combined Type 1, 2 and 3 tested protector (to BS EN 61643) for use on the main distribution board directly feeding electronic equipment such as computers, communication and control equipment, particularly where a structural Lightning Protection System (LPS) is employed. For use at boundaries up to LPZ 0 to protect against flashover (typically the main distribution board location) through to LPZ 3 to protect sensitive electronic equipment.

Features & benefits

- Very low let-through voltage (enhanced protection to IEC/BS EN 62305) between all sets of conductors (phase to neutral, phase to earth and neutral to earth - Full Mode protection)
- Full Mode design capable of handling high energy partial lightning currents as well as allowing continual operation of protected equipment
- Innovative multiple thermal disconnect technology, for safe disconnection from faulty or abnormal supplies (without compromising protective performance)
- Three way visual indication of protection status
- Advanced pre-failure warning so you need never be unprotected
- Remote indication facility allows pre-failure warning to be linked to a building management system, buzzer or light
- Changeover active volt-free contact enables the protector to be used to warn of phase loss (i.e. power failure, blown fuses, etc)
- Unique flashing warning of potentially fatal neutral to earth supply faults (caused by incorrect earthing, wiring errors or unbalanced conditions)
- Robust steel housing
- Protector base provides ultra low inductance earth bond to metal panels
- Convenient holes for flat mounting

Application

Use ESP M2 versions on main distribution board for buildings with a Class III or IV structural LPS fitted or exposed 3 phase power lines where no LPS is fitted. Use ESP M4 versions on main distribution board for buildings with a Class I or II LPS fitted.

Installation

Install in parallel, within the power distribution board, either on the load side of the incoming isolator, or on the closest outgoing way to the incoming supply. Connect, with very short connecting leads, to phase(s), neutral and earth. Phase/live connecting leads should be fused with HRC fuses, a switchfuse, MCCB or type 'C' MCB. For TT installations, contact Fursec.

Accessories

Weatherproof enclosures:

WBX M2


For use with the ESP XXX M2

WBX M4

For use with the ESP XXX M4

Full product range order codes can be found on pages 17/8-17/9

Parallel connection to three phase star (4 wire and earth) supplies (fuses not shown for clarity)

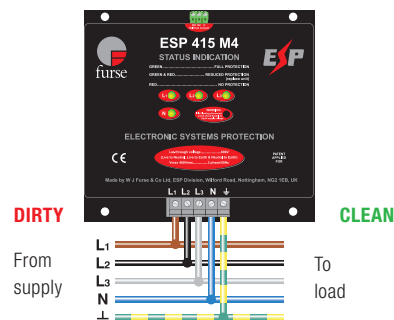

NOTE: For main distribution boards with multiple metallic services (gas, water, telecom/data lines) entering and for sub-distribution boards, the ESP M1 Series are more suited. If your supply is fused at 16 Amps, or less, the in-line protection (ESP 240 or 120-5A (or -16A) and ready-boxed derivatives) may be suitable. If you need to mount the display panel separately from the main protector unit, use the ESP XXX M2R or ESP XXX M4R.