

### Safety Information

>All electrical work must be undertaken by a qualified contractor to ensure compliance with latest edition BS7671 and IEE/IET wiring regulations.


> Before installing a LED Gear Tray or doing any maintenance, ensure power supply is turned off at the circuit breaker or fuse box.

> This product is designed for permanent connection to fixed wiring; the circuit should be protected with the appropriate MCB or fuse.

### Environment

>Please DO NOT dispose of electrical items or packaging as unsorted waste. Use the recycling facilities provided by your local authorities.

### PRODUCT DIMENSIONS

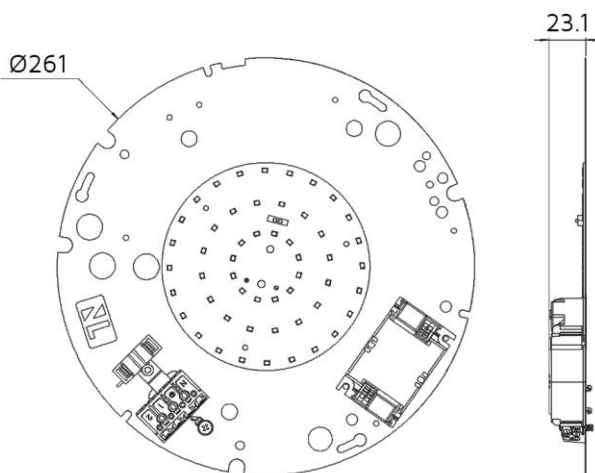

All units are in mm

### Important Warranty Information

The LED Gear Tray has a 3 Year Warranty. The registrant must provide the product part number and date of manufacture, which can be found on the gear tray along with the original purchase invoice. The Battery has a 1 Year Warranty.



Certificate No. FS 571788



Certificate No. EMS 571787

NET LED Ltd.  
Buckingway Business Park  
300 Anderson Road  
Cambridge  
CB24 4UQ  
sales@netled.co.uk  
www.netled.co.uk

Technical Helpline: 01223 851505  
Email: support@netled.co.uk

www.netled.co.uk/downloads


Manufactured by



### LED GEAR TRAY INSTALLATION GUIDE

### LED GEAR TRAY NET-33-06-XX

### KEY DATA



Light Source	LED
Power	16W
Luminous Flux	1785lm / 2084lm / 1901lm
Luminous Efficacy	112lm / 138lm / 121lm
Colour Temperature	3000K / 4000K / 5500K
Colour Rendering	>80 CRI
Manufacturer	NET LED Lighting


### SUPPLY/EARTH CLASS

220-240V AC 50/60 Hz



Class 1

Fig.1 Mains Input Termination

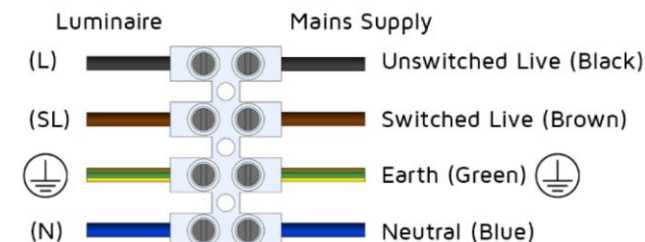


Installation procedure: Carefully read the installation instructions and ensure the mains supply is isolated before installation. Please read the safety information overleaf before carrying out any installation. Please retain this leaflet for future reference.

**LED Gear Tray installation:**


Replaceable light source (LED only) by professional

Replaceable control gear by professional


**Step 1:** Remove the Diffuser from the existing Bulkhead.

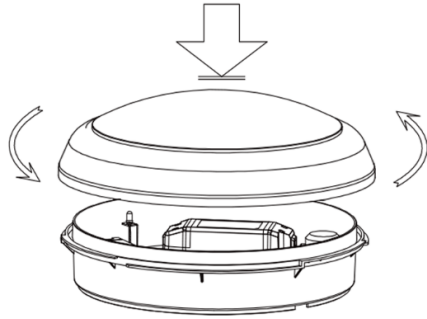


**Step 2:** Remove the Gear Tray fixing screws. Keep the screws that were used to hold the existing Gear Tray in place.

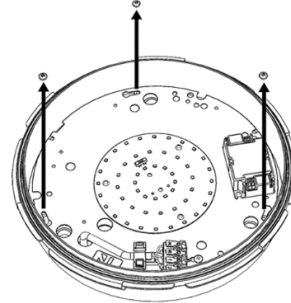


**Wiring Diagram 1**

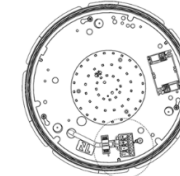


**Note:** A qualified electrician is required to carry out the electrical wiring. All wiring must be double insulated where there is a possibility of coming in contact with live wires.

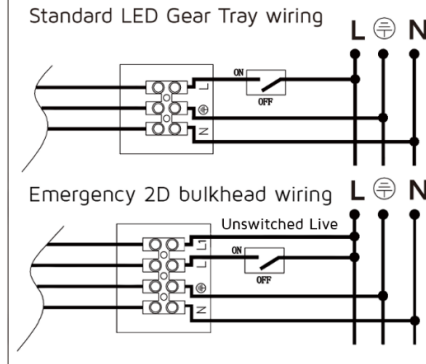

**Step 3:** Remove the Gear Tray from the Bulkhead casing, detach the existing input power wiring from the terminal block. Insert replacement Gear Tray and connect input power wiring to terminal block. Secure power cable.

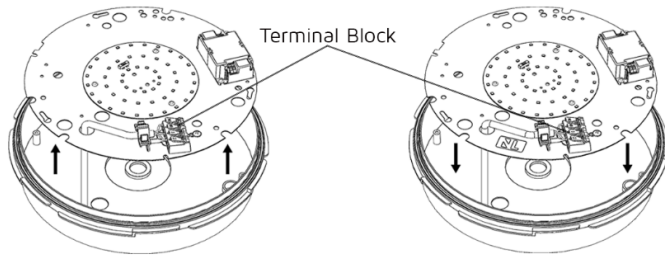

**Step 4:** Insert replacement Gear Tray securing screws. Refit the Diffuser and switch on the mains supply to test that Bulkhead functions correctly.

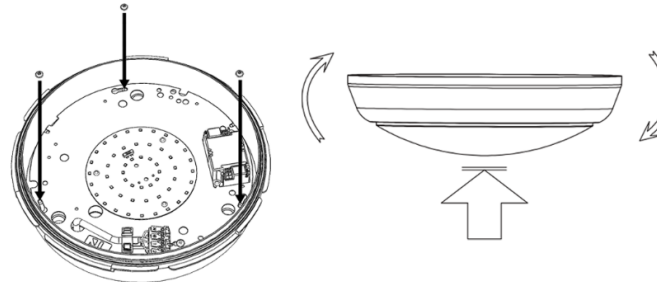

**Important Battery Warranty Information**

The battery has a 1 Year Warranty. To claim, you must provide the product part number and date of manufacture, which can be found on the label attached to Luminaire housing along with the original purchase invoice.

**Microwave Motion Sensor Configuration** - These settings are only for the LED Gear Tray with Microwave Sensor option.



Please note: DIP switch in the 'UP' position is ON.

Detection Area			Full Brightness Hold Time			Daylight Sensor			10% Corridor Function Time		
ch1	ON	100%	ch3	ON	5S	ch5	ON	Disable	ch7	ON	Off/OS
ch2	ON		ch4	ON		ch6	ON		ch8	ON	
ch1	-	75%	ch3	-	90S	ch5	-	50Lux	ch7	-	30S
ch2	ON		ch4	ON		ch6	ON		ch8	ON	
ch1	ON	50%	ch3	ON	3min	ch5	ON	15Lux	ch7	ON	10min
ch2	-		ch4	-		ch6	-		ch8	-	
ch1	-	25%	ch3	-	10min	ch5	-	5Lux	ch7	-	Always On/+∞
ch2	-		ch4	-		ch6	-		ch8	-	

## SELF TEST EMERGENCY INSPECTION GUIDE

About:

### Initial Test

Connect LED load, emergency module, battery and LED driver, then connect mains supply, this emergency conversion module will automatically start to do an initial test. If the components are not functioning correctly, the LED indicator will flash RED. If everything is correct, then it will go into charge mode.

### Functional Test

Functional tests are carried out for 10 seconds automatically every 30 calendar days.

### Duration Test

Emergency conversion module will automatically make a full duration test every 180 calendar days to check capacity of battery.








### Note

If the mains supply is off during the self-test period, emergency conversion module would terminate self-test immediately and go into emergency mode.


### Timer reset functionality

The timer for function and duration test can be set to a particular time of the day by cycling the un-switched line supply 3 times within 1 minute.

## LED STATUS INDICATOR

	Red	Slow flashing red (1 sec on, 1 sec off)	Battery failure	Battery failed the duration test or function test / No battery
	Red	Permanent red	Load failure	Open circuit / Short circuit / LED failure
	Green	Slow flashing green (1sec on, 1sec off)	Duration test underway	
	Green	Fast flashing green (0.1sec on, 0.1sec off)	Function test underway	
	Green	Permanent green	Fully Charged & Operational	
	Green	Slow flashing green (3sec on, 1sec off)	Charging mode	
	Green	LED indication	Status	Comment
	Colour	LED indication	Status	Comment

Reset instructions:

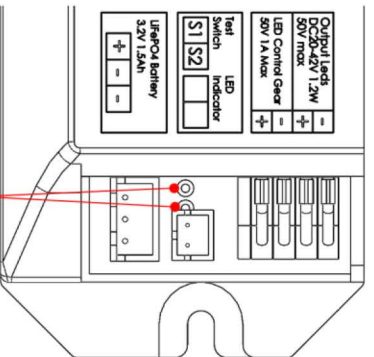

If faulty status is triggered, the LED indicator will flash RED. To reset the emergency kit, touch the two reset points for 5-10seconds with a piece of wire, or a short-circuit needle.

Reset points

